


Accessories for Oil Rotary Vacuum Pumps

Fore-line Trap

Units: mm.

Models	Applications	Applicable models	A	B	C
OFI-050C	prevent counter flow of oil diffusion	50L/min or less	74	114	KF-25
OFI-200C	prevent counter flow of oil diffusion	200L/min or less	102	150	KF-25
OFI-050V	prevent particles or liquid into vacuum pumps	50L/min or less	74	114	KF-25
OFI-200V	prevent particles or liquid into vacuum pumps	200L/min or less	102	150	KF-25

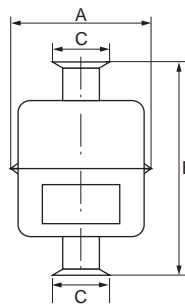


KF-25 clamp needed for installation

- : Filters are non-replaceable due to closed type.
- : Pumping speed of applicable models is at 50Hz.

Vacuum Pump Suction and Exhaust Filter

Models	SGT-100	SGT-200
Filter system	Out · In · Pass	
Applicable models	500L/min or less	500L/min or less
Pressure range	0.1MPa	
Ambient temperature	7 - 40	
Ambient humidity	85% (non condensing)	
Suction port	KF-25	KF-40
Exhaust port	KF-25	KF-40
Height	154mm	234mm

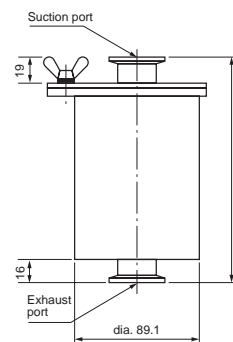

Check Valve

Applicable models	G-5DA, G-10DA, G-20DA, G-25SA, G-50DA, G-50SA, GLD-040, GLD-051
-------------------	---

- * Prevents sudden backflow of pump oil into exhaust side.
- * Optional 40 adaptor is required for GLD-040 and GLD-051.
- * Connection between suction port and pump.



Usage example



G-20DA

Suction Pipe with Filter

Hose port external diameter	dia.9mm (R1/4)
Connecting screw diameter	M20 X P1
Applicable models	G-5DA, G-10DA, G-20DA, G-25SA, G-50DA, G-50SA

- * Dust in vacuum pumps lowers the quality of pump oil and could cause damage to the pump. It is recommendable to use this suction pipe to avoid this problem.



Usage example



G-50DA